

# Carousel


## Assembly Instructions

### Opening Box


Ensure that you DO NOT push your knife too far into the box when cutting it open.

Lift the cardboard with one hand while cutting, thereby keeping the blade well away from your furniture.


**Assembling your furniture.** Please follow the following 18 steps.

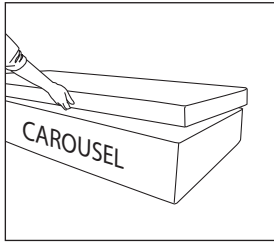


1

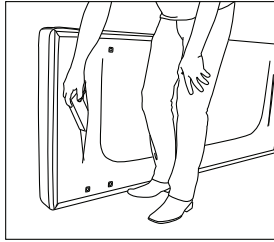


2

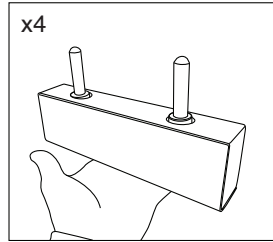


3

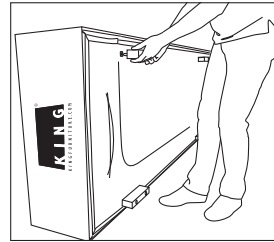


4

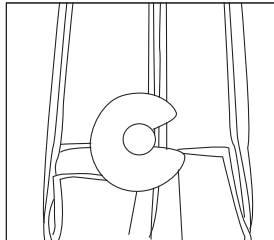


5

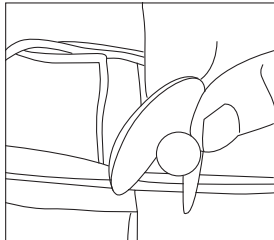


6

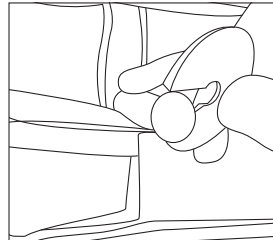


Pull off and discard 7

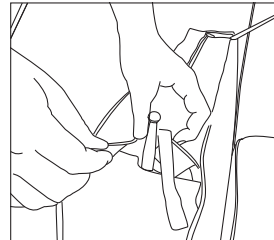


8

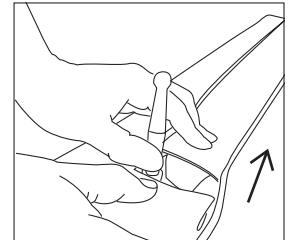


Push 9

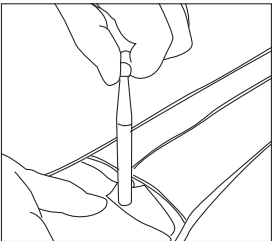


Pull pin up until it clicks into position 10

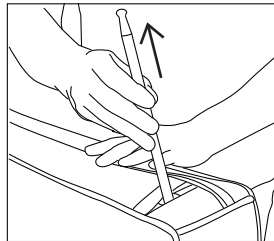


11

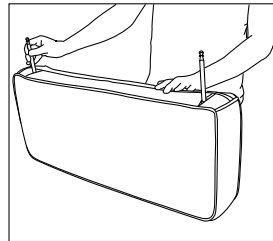


12

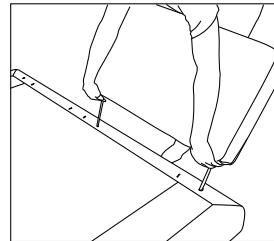


13

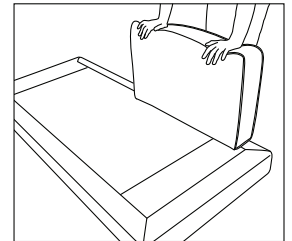


14

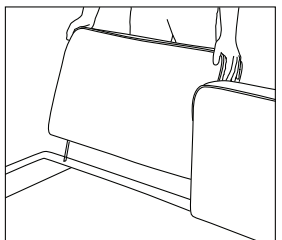


15

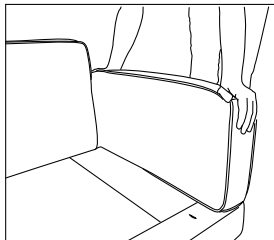

16

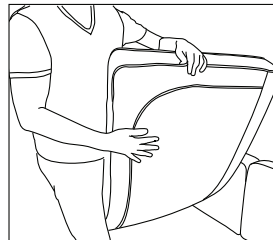


17

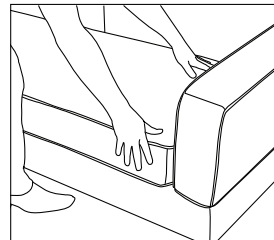


18


# Carousel Features

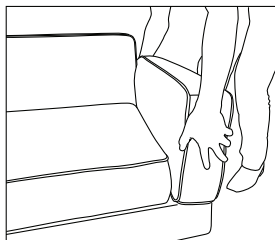


Pull up approx. 10cm,  
then Arm/back will  
drop into first  
adjustment position.

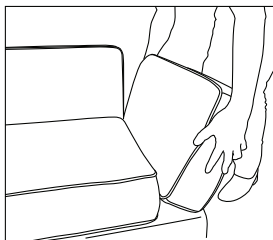


**ADJUSTMENT 1**

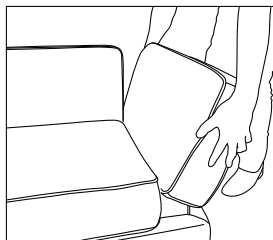


Pull up approx. 10cm,  
then Arm/back will  
drop into second  
adjustment position.

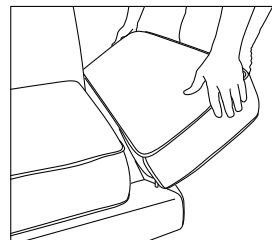

**ADJUSTMENT 2**

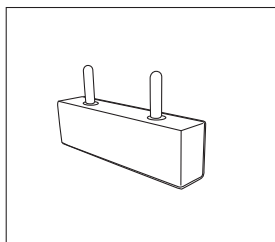

**FEET OPTION 1**

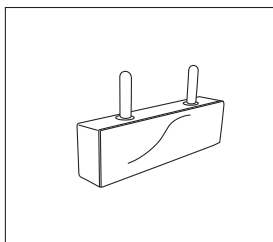

**FEET OPTION 2**